





Exploded view UB

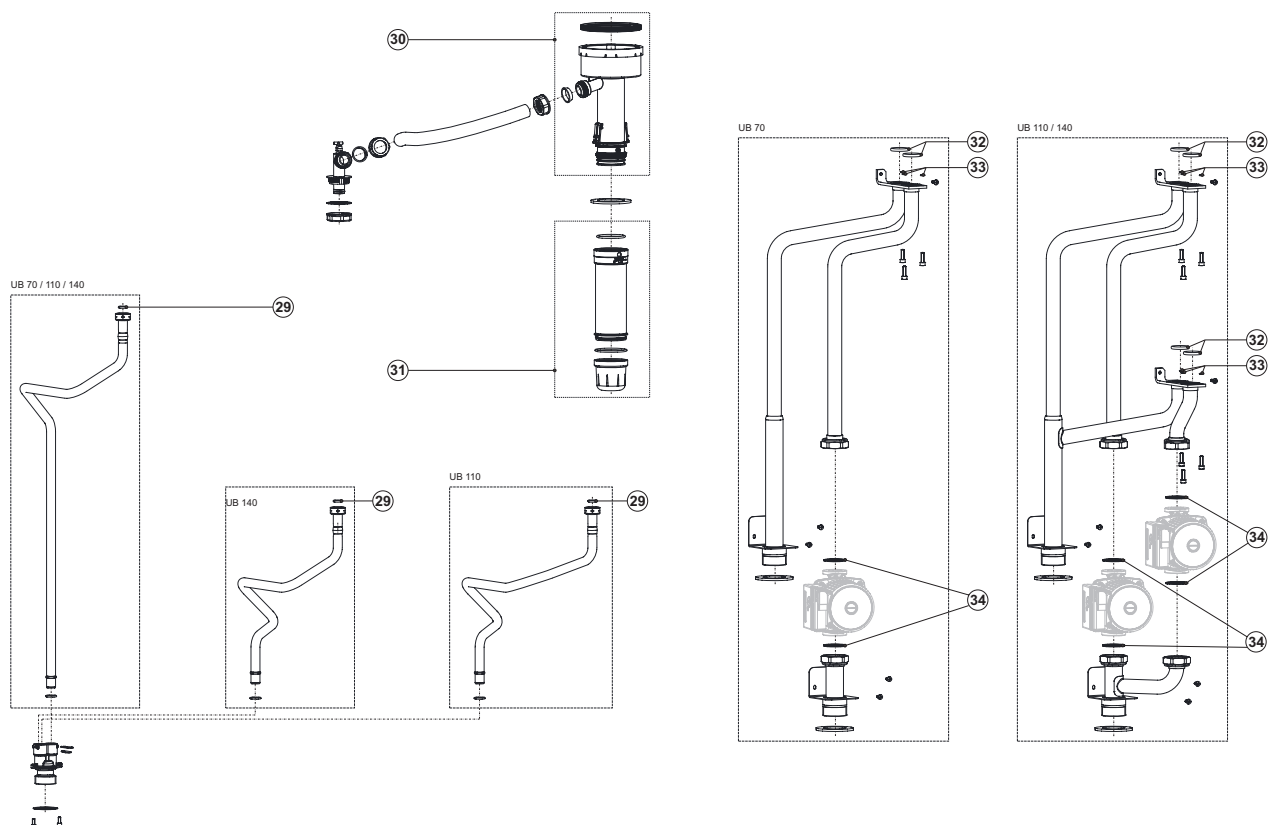

EVD-0088C

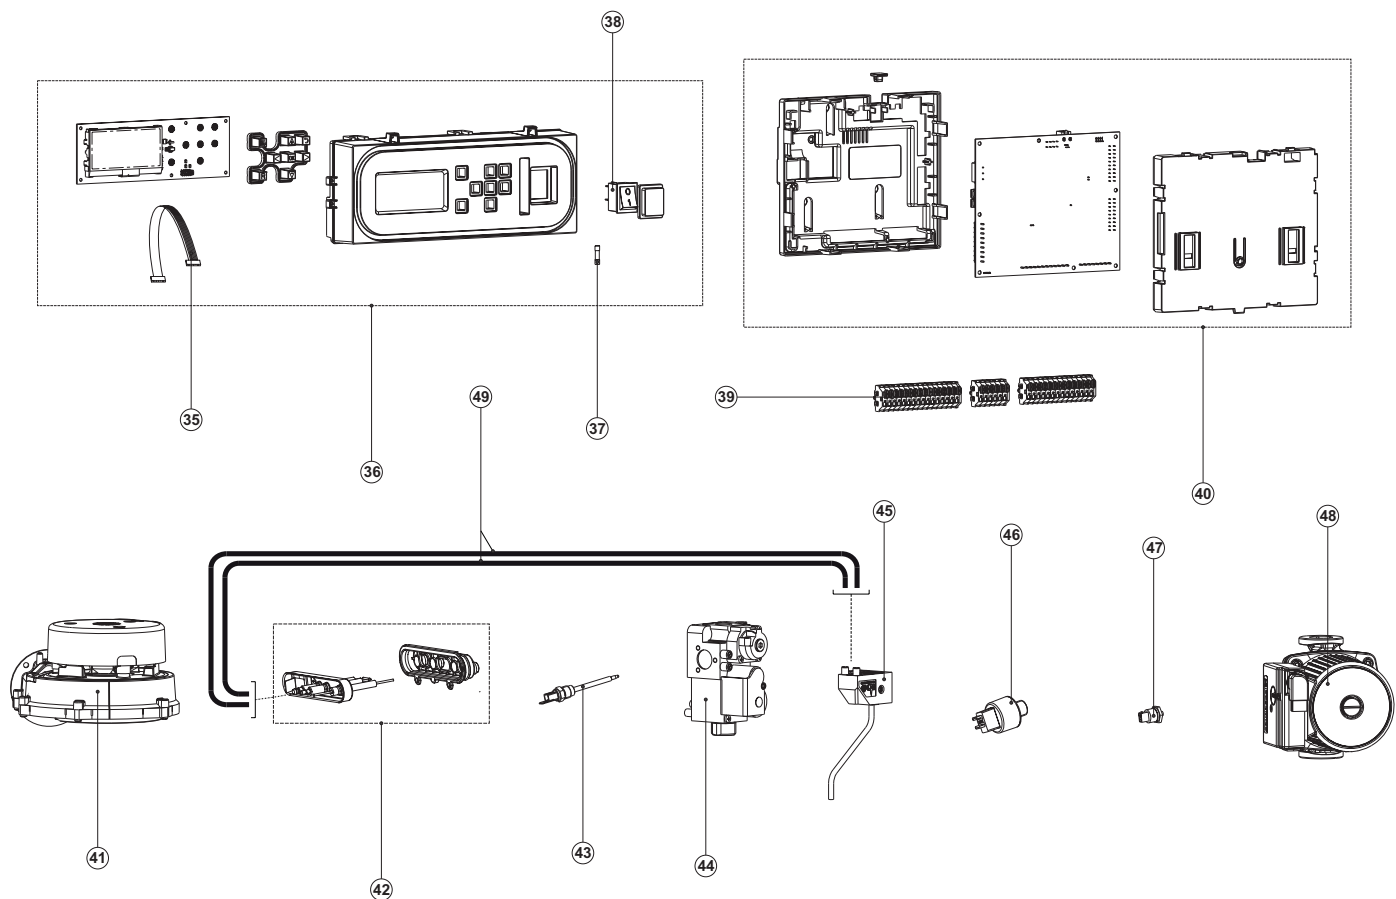

EVD-0088D

UB

UB parts



No.	Description		UB 70 (1× HEX 4)			UB 110 (1× HEX 2 en 1× HEX 4)			UB 140 (2× HEX 4)		
			From	Till	Art. no.	From	Till	Art. no.	From	Till	Art. no.
Casing											
1	Gasket (Cover Air Inlet)				0310828(S)			0310828(S)			0310828(S)
2	Gasket (Air Intake Pipe)				0310530(S)			0310530(S)			0310530(S)
3	Gasket (Cover Air Inlet)				0310829(S)			0310829(S)			0310829(S)
4	Gasket (Display-Jacket)				n.d.			n.d.			n.d.
Heat Exchanger											
5	Non Return Valve				0310995(S)			0310995(S)			0310995(S)
6	Gasket (Venturi-Fan)				0310454(S)			0310454(S)			0310454(S)
7	Venturi	HEX 2			-			0310429(S)			-
		HEX 4			0310430(S)			0310430(S)			0310430(S)
8	Gasket (Silencer-Venturi)				0310403(S)			0310403(S)			0310403(S)
9	Silencer	HEX 2			-			n.d.			-
		HEX 4			n.d.			n.d.			n.d.
10	Gasket (Venturi-Gas Control Valve)				0310458(S)			0310458(S)			0310458(S)
11	Cover Heat Exchanger	HEX 2			-			n.d.			-
		HEX 4			0310533(S)			0310533(S)			0310533(S)
12	Gasket (Heat Exchanger-Cover Heat Ex.)	HEX 2			-			0310499(S)			-
		HEX 4			0310500(S)			0310500(S)			0310500(S)
13	Gasket (Burner-Cover Heat Exchanger)	HEX 2			-			0310497(S)			-
		HEX 4			0310498(S)			0310498(S)			0310498(S)
14	Burner	HEX 2 NAT/LP			-			0310494(S)			-
		HEX 4 NAT/LP			0310534(S)			0310534(S)			0310534(S)
15	Insulation Heat Exchanger				0310505(S)			0310505(S)			0310505(S)
16	Clamp Cover Heat Exchanger				0310409(S)			0310409(S)			0310409(S)
17	Gasket (Ionisation/Ignition-Heat Ex.)				0310489(S)			0310489(S)			0310489(S)
18	Heat Exchanger	HEX 2			-			0310813(S)			-
		HEX 4			0310814(S)			0310814(S)			0310814(S)
19	Clamp Condensate Tray				0310408(S)			0310408(S)			0310408(S)
20	Gasket (Condensate Tray-Heat Exchanger)	HEX 2			-			0310496(S)			-
		HEX 4			0310502(S)			0310502(S)			0310502(S)
21	Condensate Tray	HEX 2			-			0310521(S)			-
		HEX 4			0310520(S)			0310520(S)			0310520(S)
22	Automatic Air Vent				0310815(S)			0310815(S)			0310815(S)
23	Gasket (Air Vent-Heat Exchanger)				0310816(S)			0310816(S)			0310816(S)
24	Gasket (Flue Gas Discharge Pipe)				0310525(S)			0310525(S)			0310525(S)
25	Gasket (Flue Gas Discharge Pipe)				0310529(S)			0310529(S)			0310529(S)
26	Gasket (Flue Gas Discharge Pipe-Condens.)				0310528(S)			0310528(S)			0310528(S)
27	Spring Ignition Electrode				0310491(S)			0310491(S)			0310491(S)
28	Water Pressure Sensor				0310485(S)			0310485(S)			0310485(S)
Tubing											
29	O-ring (Gas Pipe-Gas Control Valve)				0310831(S)			0310831(S)			0310831(S)
30	Syphon (Internal)				0310524(S)			0310524(S)			0310524(S)
31	Syphon (External)				0310535(S)			0310535(S)			0310535(S)
32	O-ring (Flow/Return-Heat Exhanger)				0310410(S)			0310410(S)			0310410(S)
33	O-ring (Flow/Return Connection to Heat Ex.)				0310824(S)			0310824(S)			0310824(S)
34	Gasket Pump				0310838(S)			0310838(S)			0310838(S)
Control and Electrical Parts											
35	Communication Cable Display-Control				0310376(S)			0310376(S)			0310376(S)
36	Display				0310532(S)			0310532(S)			0310532(S)
37	Fuse				0310870(S)			0310870(S)			0310870(S)
38	ON/OFF-switch				0310522(S)			0310522(S)			0310522(S)
39	Cable Assy				0310536(S)			0310536(S)			0310536(S)
40	Control				0310531(S)			0310531(S)			0310531(S)
41	Fan	HEX 2			-			0310871(S)			-
		HEX 4			0310517(S)			0310517(S)			0310517(S)
42	Ignition Electrode with Gasket				0310490(S)			0310490(S)			0310490(S)
43	Flow Sensor				0310513(S)			0310513(S)			0310513(S)
44	Gas Control Valve				0310515(S)			0310515(S)			0310515(S)
45	Ignition Trafo				0310523(S)			0310523(S)			0310523(S)
46	Water Pressure Sensor				0310485(S)			0310485(S)			0310485(S)
47	NTC Sensor				0310514(S)			0310514(S)			0310514(S)
48	Pump	HEX 2			-			0310807(S)			-
		HEX 4			0310808(S)			0310808(S)			0310808(S)
49	Ignition Cable Set				0310516(S)			0310516(S)			0310516(S)

Parts that are marked yellow
are parts that are used for maintenance.

UB

UB Conversion sets

Description	UB 70 (1× HEX 4)			UB 110 (1× HEX 2 en 1× HEX 4)			UB 140 (2× HEX 4)		
	From	Till	Art. no.	From	Till	Art. no.	From	Till	Art. no.
Conversion set to LP-gas			n.a.			0310343(S)			0310344(S)
Conversion set to NAT-gas			0310804(S)			0310805(S)			0310806(S)